

## Important Safeguards for Saladmaster Electrical Appliances



When using any electrical appliance, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handles and knobs. Do not operate the electrical appliance without handles in place.
3. To protect against electrical hazards, do not immerse core, plugs, or heat control in water or other liquid.
4. Saladmaster® electrical appliances are not intended for use by young children or infirm persons without supervision.
5. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
6. Do not operate any appliance with a damaged cord or plug, or after the appliance malfunctions or has been damaged. Return appliance for examination and possible repairs.
7. The use of accessory attachments not recommended by the appliance manufacturer may cause injuries.
8. Do not use outdoors.
9. Do not let cord hang over edge of table or counter, or touch hot surfaces.
10. Do not place on or near a hot burner or in a heated oven.
11. Use extreme caution when moving an appliance containing hot oil or other hot liquid.
12. Always attach plug to appliance first, then plug cord into wall outlet. To disconnect, press the off button, then remove plug from wall outlet.
13. This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electrical shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician for assistance. **DO NOT ATTEMPT TO MODIFY THE PLUG IN ANY WAY.**
14. Do not use appliance for other than intended household use.
15. Do not tamper with pressure relief valve behind handle. If oil leaks from under handles or from any part of the appliance, do not use. For repairs, see warranty.
16. After cleaning, the appliance inlet (where the electrical connector plugs in) must be thoroughly dried before appliance is used again.

### Rating:

